



117-6328

Seite/Page 1 / 2

Bild-Nr Fig Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripcion Designazione Benaemning
-	676 880 40	1	Traverse, kpl.	Crosshead assy.
01	676 882 40	1	Traverse, SK	Crosshead, weldment
02	870 509 40	1	Führungsblech, links SK	Guide plate l.h., weldment
03	870 508 40	1	Führungsblech, rechts SK	Guide plate r.h., weldment
04	871 169 40	1	Festpunkt, kpl.	Fixed point assy.
05	871 200 40	1	Halter	Retainer
06	656 873 40	7	Seilrolle, kpl. best. aus Bild-Nr. 52,53	Sheave assy. consist. of fig-nos: 52-53
07	431 423 40	1	Walze, kpl. einschl. Bild-Nr. 55	Rolle assy. incl. fig-no: 55
08	870 650 40	1	Rohr, kpl.	Pipe assy.
09	870 648 40	2	Buchse	Bushing
10	350 562 99	2	Kegelschmiernippel	Grease nipple
11	505 909 98	1	Sicherungsbolzen	Safety pin
12	007 266 98	3	Sicherungsfeder	Safety spring
13	870 646 40	1	Achse	Axle
14	656 599 40	5	Abstandsring	Distance ring
15	677 723 40	1	Ring	Ring
16	871 204 40	3	Ring	Ring
17	871 205 40	1	Rohr	Pipe
18	871 206 40	1	Rohr	Pipe
19	421 093 40	2	Endscheibe	End plate
20	307 824 99	6	Schraube	Bolt
21	505 914 98	2	Sicherungsbolzen	Safety pin
22	870 652 40	1	Bolzen	Pin
23	870 655 40	2	Rohr	Pipe
24	342 144 99	1	Splint	Cotter pin
25	870 653 40	2	Bolzen	Pin
26	342 121 99	1	Splint	Cotter pin
27	511 618 98	1	Klappstecker	Fore lock
28	656 615 40	2	Blech	Plate
29	656 614 40	2	Achshalter	Axle retainer
30	320 407 99	4	Schraube	Bolt
31	490 904 40	2	Schalter	Switch
32	319 174 99	8	Schraube	Screw
52	512 990 98	1	Zylinderrollenlager	Bearing
53	512 992 98	2	Sprengring	Snap ring
55	368 170 99	1	Rillenkugellager	Bearing

**Traverse zum Mastkopf
Crosshead to Superlift Top**

117-6328

Seite/Page 2 / 2