



188-6166

Seite/Page 1 / 2

<b>Bild-Nr</b> Fig Fig Fig Fig Bild nr	<b>ET-Nr</b> Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	<b>Stückzahl</b> Qty Qte Ctd Qta Antal		<b>Gegenstand</b> Description Designation Descripcion Designazione Benaemning
01	459 949 40	1	Stütze, SK	Mounting aid
02	459 956 40	2	Rohr	Pipe
03	459 967 40	2	Rad	Wheel
04	459 968 40	2	Bolzen	Pin
05	342 144 99	2	Splint	Cotter pin
06	459 969 40	5	Bolzen	Pin
07	342 103 99	4	Splint	Cotter pin
08	001 645 98	3	Sicherungsfeder	Locking spring
09	495 870 40	2	Bolzen	Pin

**Hilfsstütze**  
**Auxiliary support**

**188-6166**

Seite/Page 2 / 2