



221-1203

Seite/Page 1 / 2

Bild-Nr Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripcion Designazione Benaemning
01	349 326 40	1	Dieselmotor	Diesel engine
02	307 805 99	8	Schraube	Screw
03	332 334 99	8	Mutter	Nut
04	343 112 99	8	Federring	Lock washer
05	501 388 98	10	Schraube	Screw
06	343 178 99	10	Federscheibe	Lock washer
07	501 005 98	4	Schraube	Screw
08	760 430 00	4	Scheibe	Washer
09	332 115 99	4	Mutter	Nut
10	343 113 99	4	Federring	Lock washer
11	771 384 00	4	Scheibe	Washer
12	325 647 99	4	Schraube	Screw
13		6	Schraube	Screw
14	504 241 98	6	Schraube (Länge 80 mm)	Screw
15	501 389 98	8	Schraube	Screw
16	346 511 99	8	Federring	Lock washer
17	308 576 99	12	Schraube	Screw
18	504 258 98	12	Federscheibe	Lock washer
19	760 442 00	2	Motorlager	Engine suspension
20	418 851 40	1	Transmatic-Anlage, kpl. Einzelteile siehe EL-Blätter Gruppe 12	Transmatic-system assy. parts break down see pages group 12
21	349 142 40	1	Konsole	Console
22	349 141 40		Konsole	Console
23	269 977 40	6	Gummipuffer	Rubber block support
24	307 779 99	24	Schraube	Screw
25	334 681 99	24	Mutter	Nut
26	501 370 98	12	Schraube	Screw
27	343 116 99	12	Federring	Lock washer
28	308 423 99	6	Schraube	Screw
29	334 695 99	6	Mutter	Nut
31	350 591 40	1	Halslager kpl.	Bearing assy.
32	350 593 40	1	Buchse	Bush
33	324 653 99	2	Gewindestift	Thread pin
35	439 261 00	2	Gummilager	Pad