


Bild-Nr. Fig. Fig. Fig. Fig. Bild nr.	ET-Nr. Part-No. No. de Piece No. de Pieza No. del Pezzo Detail nr.	Gegenstand Description Designation Descripcion Designazione Benaemring	Stückzahl Qty. Qte. Ctd. Qta. Antal	<p><b>MANNESMANN DEMAG</b> Baumaschinen Ersatzteil-Zentrum</p> <p>Diese Nummer in Verbindung m. d. Bild-Nr. bitte zu jeder ET-Nr. nennen!</p> <p>Fill up this number by Fig.-No. and add to every Part-No.!</p> <p>Veuillez indiquer joint à chaque numéro de pièce de rechange, ce numéro de la page et le numéro d'illustration correspondant!</p> <p>¡Mencionen junto con cada numero de repuesto este numero de la pagina y el numero de la figura respectiva!</p> 
00	369 497 40	Drehzahlverstellung, kpl. Speed control, assy.	1	
01	369 491 40	Konsole Console	1	
02	374 666 40	Stange Rod	1	
03	374 667 40	Scheibe Disk	1	
04	439 062	Hebel Lever	1	
05	—	Nehmerzylinder siehe EL-Blatt 90-1690 Slave cylinder see page 90-1690	1	
06	300 257 99	Winkelgelenk Angle joint	2	
07	340 463 99	Scheibe Washer	4	
08	307 773 99	Schraube Bolt	2	
09	307 730 99	Schraube Bolt	4	
10	332 351 99	Mutter Nut	4	
11	332 110 99	Mutter Nut	6	
12	346 500 99	Federring Lock washer	2	
—	170 470 40	Loctite 245 Loctite	1	
Drehzahlverstellung Speed Control			242-1243	
			Seite Page 1 folgt Seite continued —	