



59-2151

Seite/Page 1 / 2

Bild-Nr Fig Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripcion Designazione Benaemning
01	131 533 12	1	Frontplatte	Front panel
02	131 558 12	1	Frontplatte	Front panel
03	131 535 12	1	Frontplatte	Front panel
04	131 559 12	1	Frontplatte	Front panel
05	131 531 12	2	Frontplatte	Front panel
06	551 038 40	1	Tastentippschalter	Push toggle switch
08	363 410 40	2	Blindplatte	Blank plate
09	131 862 12	1	Symbolplatte	Symbol plate
10	001 259 12	1	Signalgeber siehe El.-Blatt 993-1103	Transmitter see page 993-1103
11	131 581 12	1	Signalgeber siehe EL.-Blatt 993-1104	Transmitter see page 993-1104
13	889 364 40	1	Flanschplatte	Face
14	889 367 40	1	Flanschplatte	Face
15	320 214 99	8	Schraube	Screw
16	318 372 99	4	Senkschraube	Screw
17	507 049 98	16	Linsensenkschraube	Screw
18	490 943 40	16	Rosette	Fitting
19	001 515 12	2	Aschenbecher	Ash tray