



62-6030

Seite/Page 1 / 2

Bild-Nr Fig Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripcion Designazione Benaemning
00	880 650 40	1	Anschlußkopf, kpl.	Head adapter, assy
01	880 651 40	1	Anschlußkopf	Head adapter
02	100 102 12	1	Kraftmeßdose 200 t	Load cell
03	100 107 12	5	Seilrolle, kpl.	Sheave, assy
04	100 109 12	1	Zuglasche, kpl.	Bugle, assy
06	100 112 12	2	Distanzring	Spacer
07	100 113 12	1	Achse	Axle
08	100 114 12	2	Scheibe	Disc
09	100 115 12	4	Distanzring	Spacer
10	100 116 12	2	Distanzring	Spacer
11	307 952 99	6	Schraube	Bolt
12	100 118 12	2	Sicherungsbolzen	Socket pin
13	342 081 99	2	Splint	Cotter pin
14	340 613 99	2	Scheibe	Disc
15	490 036 40	5	Gummiteil mit Hülse	Rubber with sleeve
16	490 037 40	5	Bügel	Yoke
17	506 758 98	5	Flügelmutter	Wing nut
18	100 119 12	1	Seilschutz	Rope deflector
19	500 051 98	2	Bolzen	Pin
-	634 219 40	-	Fett	Grease
21	511 617 98	2	Klappstecker	Fore lock
31	100 103 12	1	Kraftmeßdose SK	Load cell, weldment
32	100 101 12	1	Buchse	Bushing
33	313 502 99	2	Ringschraube	Ring screw
34	100 117 12	1	Kraftmeßdose 200 t	Load cell
35	350 562 99	1	Schmiernippel	Grease
36	100 108 12	5	Seilrolle	Sheave
37	500 044 98	5	Rohrlager	Roller bearing
38	342 596 99	10	Sicherungring	Circlip
41	100 110 12	1	Zuglasche	Bugle
42	100 101 12	1	Buchse	Bushing
43	350 562 99	1	Schmier-Nippel	Grease nipple

**Anschlußkopf
Head Adapter**

62-6030

Seite/Page 2 / 2