



90-1697

Bild-Nr Fig Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detailj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripcion Designazione Benaemning
01	264 557 40	1	Nehmerzylinder kpl.	Slave cylinder
02	987 332 00	1	Zylindergehäuse	Housing
03	987 333 00	1	Kolben	Piston
04	687 684 00	1	Nutring	V-seal
05	687 685 00	1	Schutzkappe kpl. einschl. Bild-Nr. 07	Protective cap incl. fig.-no: 07
07	987 337 00	1	Filzring	Felt
08	987 366 00	1	Druckbolzen	Bolt
09	687 686 00	1	Entlüfterventil kpl. einschl. Bild-Nr. 17	Breather valve incl. fig.-no: 17
10	987 340 00	1	Federteller	Spring cap
11	987 341 00	1	Druckfeder	Compression spring
12	987 342 00	1	Federteller	Spring cap
13	987 343 00	1	Halteblech	Retainer plate
14	307 750 99	2	Schraube	Screw
15	343 608 99	2	Fächerscheibe	Lock washer
16	343 478 99	1	Seeger-Sicherung 6	Circlip
17	687 687 00	1	Staubkappe	Dust cap
-	687 688 00	1	Reparatursatz Bild-Nr. 04,07 u. 17	Repair kit fig.-nos: 04,07 and 17
<b>Nehmerzylinder Slave Cylinder</b>				<b>90-1697</b>  Seite/Page 2/2