


00

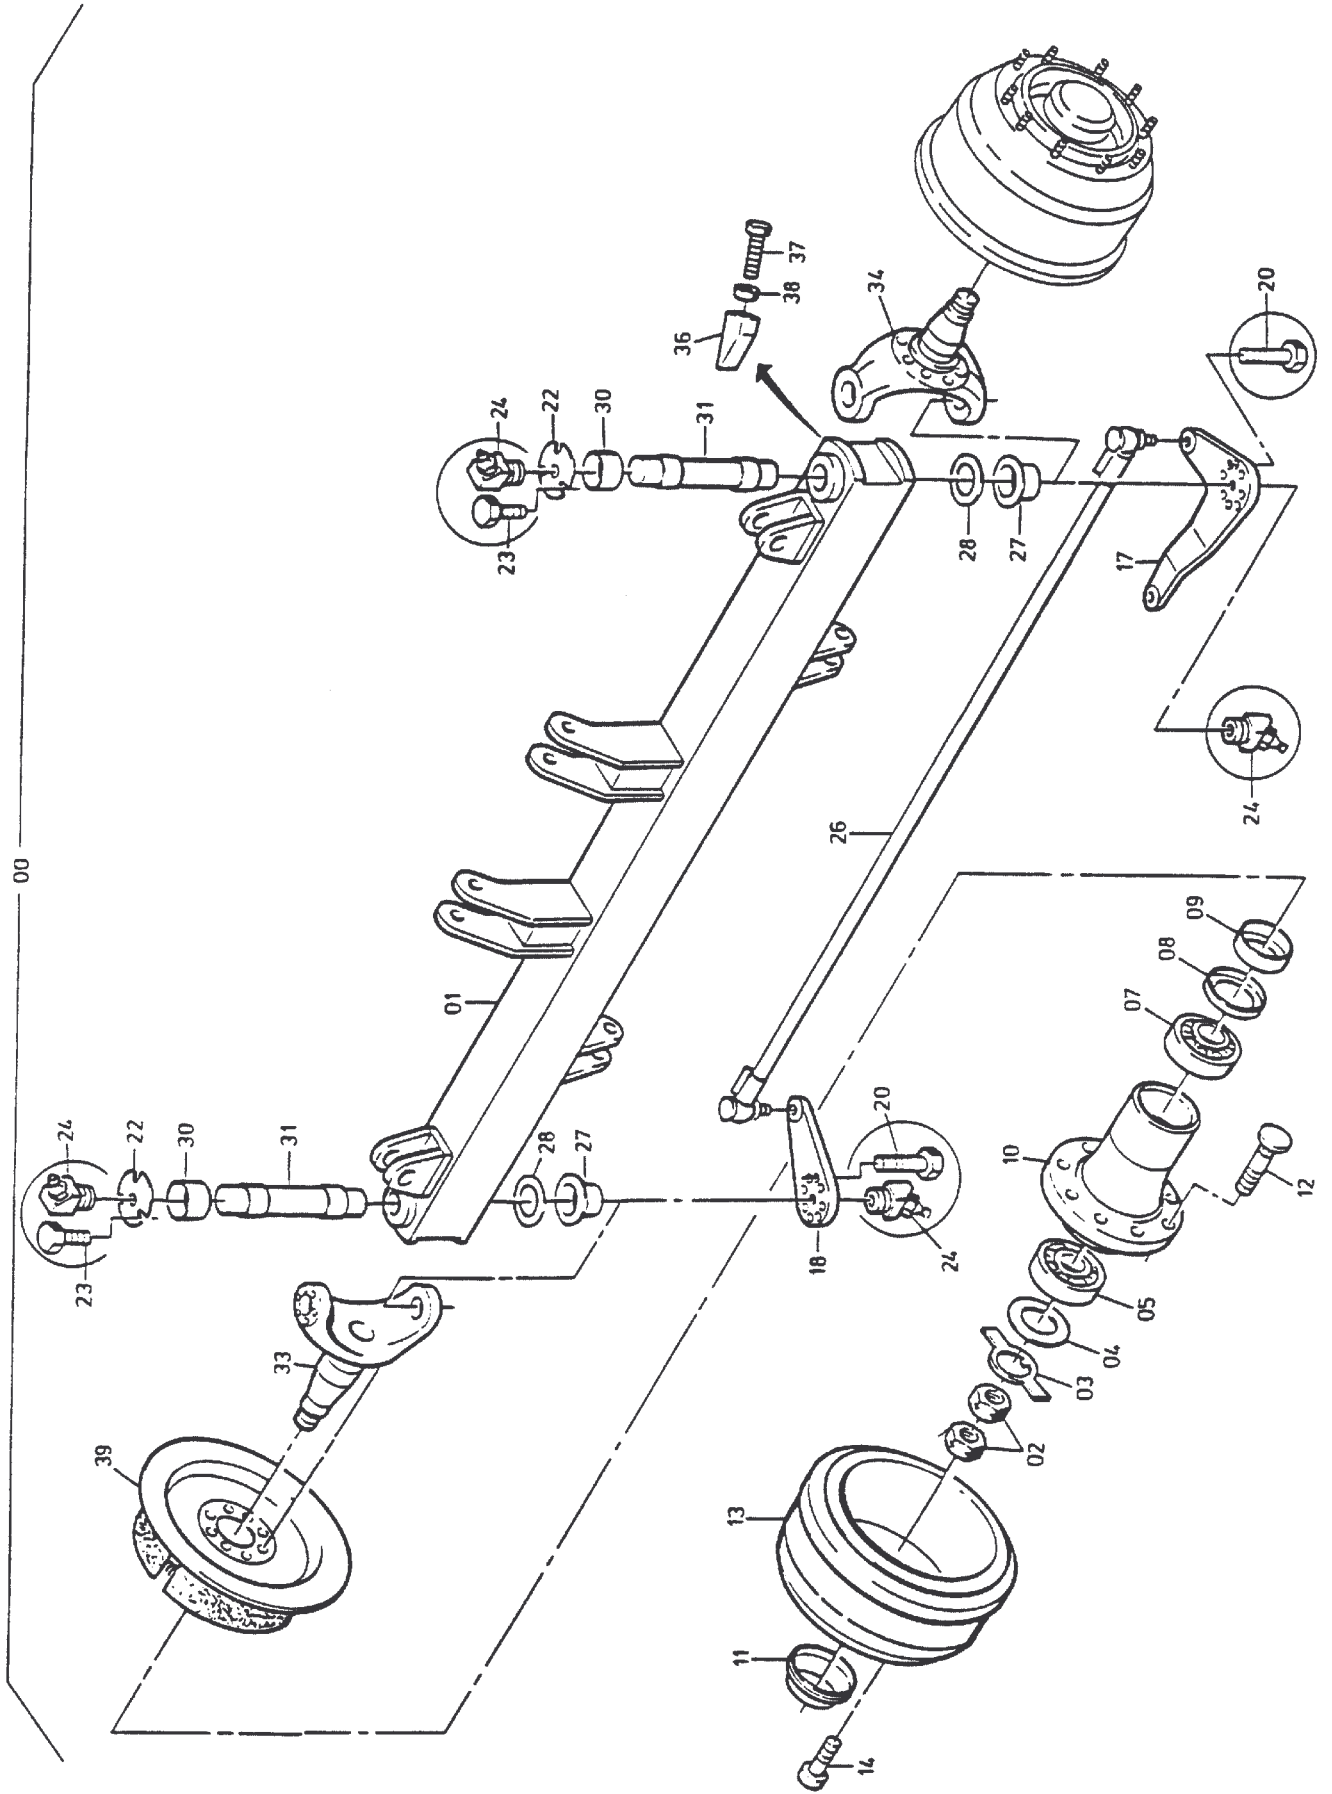

**90-4760**

Seite/Page 1 / 2

<b>Bild-Nr</b> Fig Fig Fig Fig Bild nr	<b>ET-Nr</b> Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	<b>Stückzahl</b> Qty Qte Ctd Qta Antal		<b>Gegenstand</b> Description Designation Descripcion Designazione Benaemning
00	402 014 40	1	Lenkachse	Steering axle
01	777 329 73	1	Achsgehäuse, kpl.	Axle housing, assy.
02	343 391 99	2	Wellenmutter	Nut
03	343 420 99	2	Sicherungsblech	Locking plate
04	997 103 00	2	Nasenscheibe	Gib disc
05	363 017 99	2	Kegelrollenlager	Roller bearing
07	534 023 99	2	Kegelrollenlager	Roller bearing
08	180 767 40	2	Dichtring	Seal ring
09	760 673 00	2	Abstandsring	Spacer ring
10	760 674 00	2	Radnabe	Wheel hub
11	760 675 00	2	Verschlußkappe	Cap
12	760 676 00	20	Radbolzen	Wheel bolt
13	770 529 00	2	Bremstrommel	Brake drum
14	320 604 99	4	Schraube	Screw
17	770 530 00	1	Lenkspurhebel	Steering lever
18	770 531 00	1	Spurhebel	Lever
20	308 417 99	24	Schraube	Screw
22	997 202 00	1	Deckel	Cover
23	307 839 99	6	Schraube	Screw
24	350 562 99	4	Kegelschmiernippel	Fitting
26	997 209 00	1	Spurstange	Steering track rod
27	956 139 00	2	Lagerbuchse	Bush
28	965 719 00	2	Anlaufscheibe	Stop washer
30	956 142 00	2	Lagerbuchse	Bush
31	997 473 00	2	Achsschenkelbolzen	Steering knuckle pin
33	997 497 00	1	Achsschenkel	Steering knuckle
34	997 118 00	1	Achsschenkel	Steering knuckle
36	760 669 00	2	Lenkanschlag	Steering block
37	308 417 99	2	Schraube	Screw
38	333 185 99	2	Mutter	Nut
39	-	2	Bremse siehe EL-Blatt 90-3827	Brake see page 90-3827

**Lenkachse**  
**Steering Axle**

**90-4760**

Seite/Page 2 / 2