



**970-3615**

Seite/Page 1 / 2

| <b>Bild-Nr</b><br>Fig<br>Fig<br>Fig<br>Bild nr | <b>ET-Nr</b><br>Part-No<br>No. de Piece<br>No. de Pieza<br>No. del Pezzo<br>Detalj nr | <b>Stückzahl</b><br>Qty<br>Qte<br>Ctd<br>Qta<br>Antal |  | <b>Gegenstand</b><br>Description<br>Designation<br>Descripcion<br>Designazione<br>Benaemning |
|--|---|---|--|--|
| 01   | -   | 1   | Lenktriebachse<br>s. EL-Blatt 993-0587 | Steering drive axle<br>see page 993-0587   |
| 02   | 654 643 40  | 2   | Tristop-Zylinder                       | Tri-stop cylinder  |
| 03   | 604 025 40  | 2   | Mutter                                 | Nut  |
| 04   | 604 597 40  | 1   | Lenkstange                             | Steering rod   |
| 05   | 000 696 12  | 1   | Lenkzylinder                           | Steering cylinder  |
| 06   | 551 226 40  | 3   | Achsstrebe                             | Axle bracket   |
| 07   | 509 560 98  | 2   | Schraube                               | Bolt   |
| 08   | 509 562 98  | 4   | Schraube                               | Bolt   |
| 09   | 621 762 40  | 2   | Stösselschalter "Öffner"               | Tappet switch N.C.   |
| 10   | 349 003 40  | 1   | Stösselschalter "Schliesser"           | Tappet switch N.O.   |
| 20   |   | 1   | Dichtsatz                              | Seal kit   |

**Achseinbau 3. Achse**  
**Axle Mounting 3. Axle**

**970-3615**

Seite/Page 2 / 2