


**993-0302**

Seite/Page 1 / 3

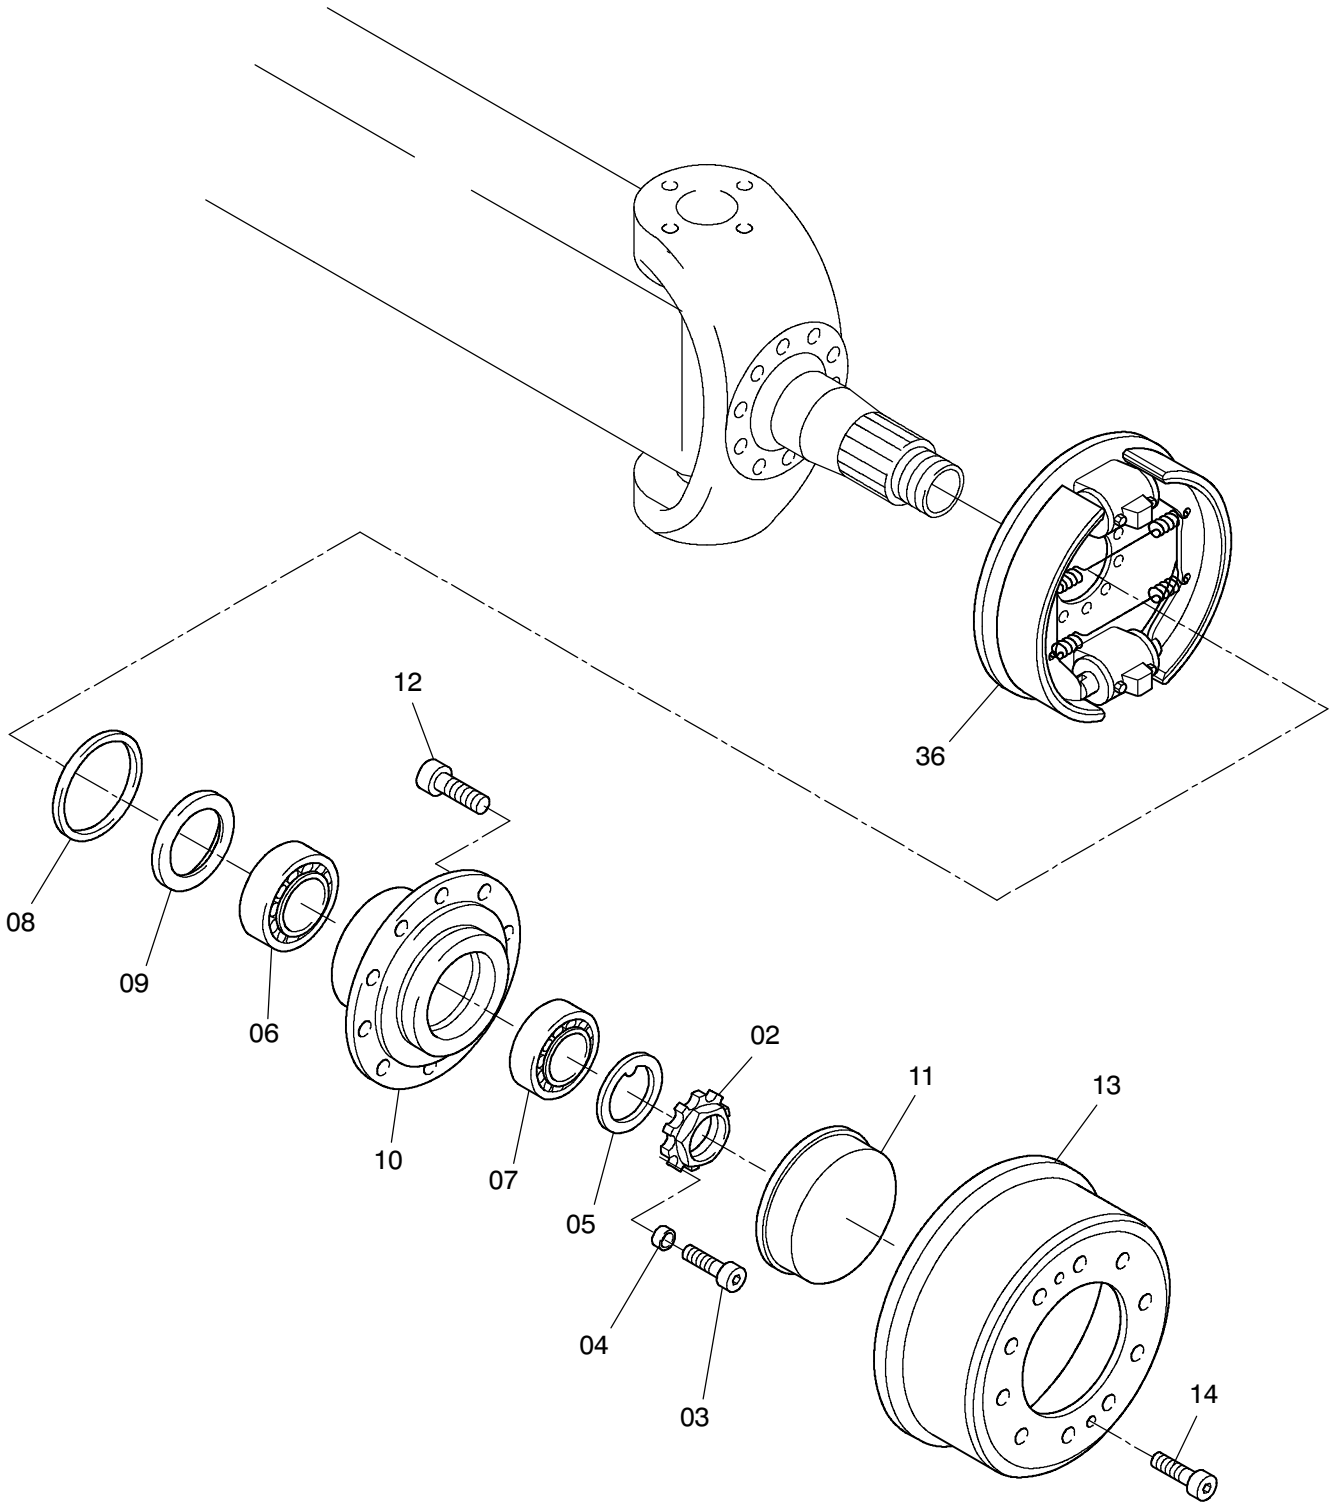

**993-0302**

Bild-Nr Fig Fig Fig Fig Bild nr	ET-Nr Part-No No. de Piece No. de Pieza No. del Pezzo Detalj nr	Stückzahl Qty Qte Ctd Qta Antal		Gegenstand Description Designation Descripción Designazione Benaemning
00	662 157 40	1	Lenkachse, kpl.	Steering axle, assy.
01	400 142 12	1	Achsgehäuse	Axle housing
02	997 415 00	2	Wellenmutter	Shaft nut
03	350 342 99	2	Schraube	Screw
04	777 094 73	2	Buchse	Bushing
05	997 103 00	2	Nasenscheibe	Gib disc
06	534 023 99	2	Rollenlager	Roller bearing
07	363 017 99	2	Rollenlager	Roller bearing
08	511 340 98	2	Dichtring	Seal ring
09	760 673 00	2	Abstandsring	Spacer ring
10	760 674 00	1	Radnabe	Wheel hub
11	760 675 00	1	Verschlußkappe	Screw plug
12	780 502 73	20	Radbolzen	Wheel bolt
13	761 741 73	2	Bremstrommel	Brake drum
14	350 368 99	4	Zylinderschraube	Screw
15	400 143 12	1	Spurhebel, rechts	Lever, r.h.
16	772 407 73	1	Hebel, rechts	Lever, r.h.
17	400 144 12	1	Spurhebel, links	Lever, l.h.
18	510 517 98	20	Schraube	Screw
19	771 047 00	1	Deckel	Cover
20	319 305 99	4	Schraube	Bolt
21	350 562 99	2	Schmiernippel	Fitting
22	350 564 99	2	Schmiernippel	Grease nipple
23	763 203 73	1	Spurstange	Steering track rod
24	350 385 99	3	Schraube	Bolt
25	511 416 98	2	O-Ring	O-ring
26	771 346 00	2	Lagerbuchse, oben	Bush, top
27	770 523 00	2	Lagerbuchse, unten	Bush, lower
28	956 719 00	2	Anlaufscheibe	Stop washer
29	772 366 73	2	Achsschenkelbolzen	Steering knuckle pin
30	780 163 73	2	Anlaufscheibe	Stop washer
31	771 284 00	2	Federbock	Spring block
32	319 311 99	2	Zylinderschraube	Bolt
33	345 629 99	2	Zylinderstift	Parallel pin
34	400 136 12	2	Achsschenkel	Steering knuckle
36	-	-	Bremse siehe EL-Blatt 90-0819	Brake see page 90-0819
37	777 331 73	2	Schraube	Screw
38	320 112 99	2	Mutter	Nut

**Lenkachse A4**  
**Steering axle 4th axle**

**993-0302**

Seite/Page 3 / 3